






## INSTALLATION OF THE VANDAL RESISTANT FRAME WITH LED PANEL:




Ensure that the system is switched off and follow safety precautions before handling to avoid electrical shock.

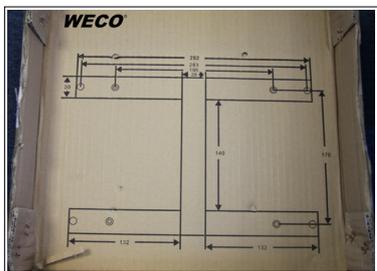

1. Drill the ceiling or cabin roof with the help of the drilling template printed inside the outer carton of the LED panel.




2. Remove the screws using a safety torx screwdriver and remove the fixing parts.

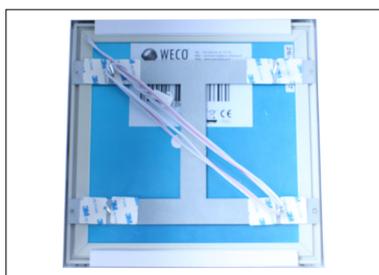


3. Position the LED panel in the frame and check the positioning of the fixing parts (H frame screws under the fixing parts)



4. Fasten the frame with the screws on the side.

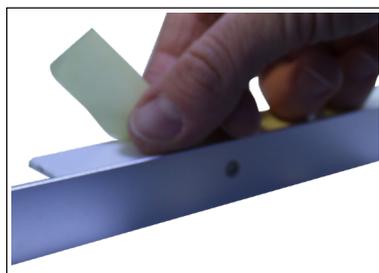

5. Remove the protective film from the double-sided scotch on fixing parts.

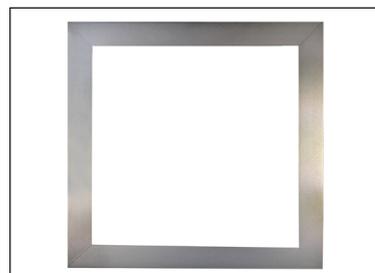

6. Install the vandal resistant frame and secure it from the inside of the cabin thanks to double-sided scotch.



7. Bolt through the back of the ceiling or through the cabin roof.